



# ASSEMBLY INSTRUCTION


MODEL : HM 338.02 DESC : WARDROBE WITH 2 DOORS & DRAWER




DO NOT USE KNIFE




HEAT



CHEMICAL




KEEP DRY



SOFT DRY CLOTH



HANDLE WITH CARE



DO NOT USE KNIFE

HARDWARE		PART LIST	
A	WOOD SCREW 8 X 30	18	
B	12MM CD SCREW M3.5X12MM	26	
C	50MM CD SCREW MAX35MM	4	
D	38MM CD SCREW MAX35MM	30	
E	50MM NAIL 50	50	
F	12MM TAPPING SCREW M3X12MM	24	
G	HANDLE 108 4MM (PVC)	4	
H	25MM CD SCREW MAX35MM	4	
I	PVC NAIL WITH PN 1/2	5	
J	2 PIN STOPPER	1	
K	HINGES 208	6	
L	DRAWER SLIDE 4" (CLOR)	2	
M	DRAWER SLIDE 4" (CLOR)	2	
N	18MM CHROME PIPE	1	
O	L BRACKET M302	1	

**STEP 1**

**STEP 2**

**STEP 3**

**STEP 4**

**STEP 5**


**STEP 6**

**STEP 7**


**STEP 8**

**STEP 9**


**FRONT VIEW**




SOFT, DRY CLOTH




CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : HM 338.02





DESC : WARDROBE WITH 2 DOORS & DRAWER

STEP 10


STEP 11

STEP 12


COMPLETED

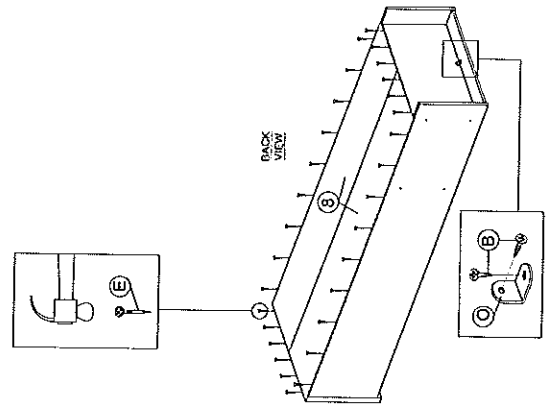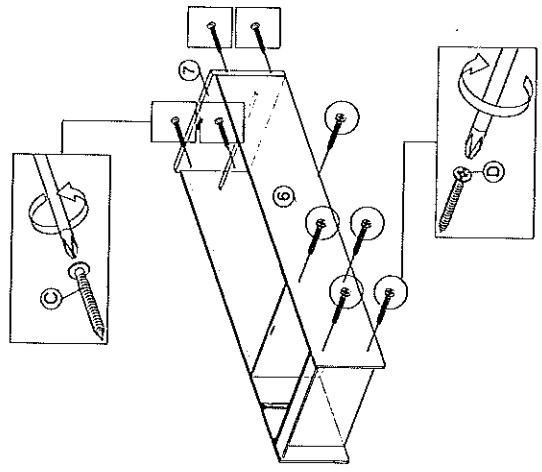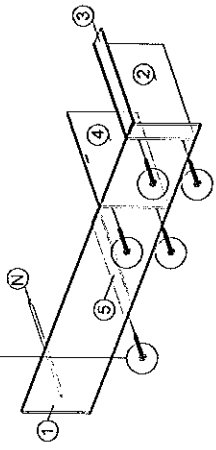

STEP 13

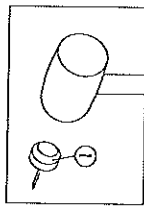

BACK VIEW

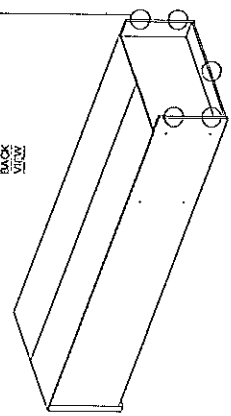

STEP 14

