

MODEL : HM 2221.02

ASSEMBLY INSTRUCTION

DESC : SHOE CABINET

HARDWARE	
A1	SCREW 3.5X10
A2	SCREW 3.5X10
6 SET	
B	SCREW 3.5X10
6	
C	WOOD SCREW 8 X 25
10	
D	KEY
1	
E	CB SCREW 12MM X 36
36	
F	CB SCREW 16MM X 36
16	
G	CB SCREW 25MM X 36
12	
H	CB SCREW 50MM X 36
4	
I	HANDLE 12X12
3	
J	NAIL 5.8
22	
K	SHOE RING PVC LEG
4	
L	2 TRAY SHOE CABINET (155 LEFT)
3	
M	2 TRAY SHOE CABINET (155 RIGHT)
3	
N	TRAY JOINER
6	
O	TRAY JOINER
6	
P	STOPPER 2 PIN
6	

PART LIST

STEP 1


STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

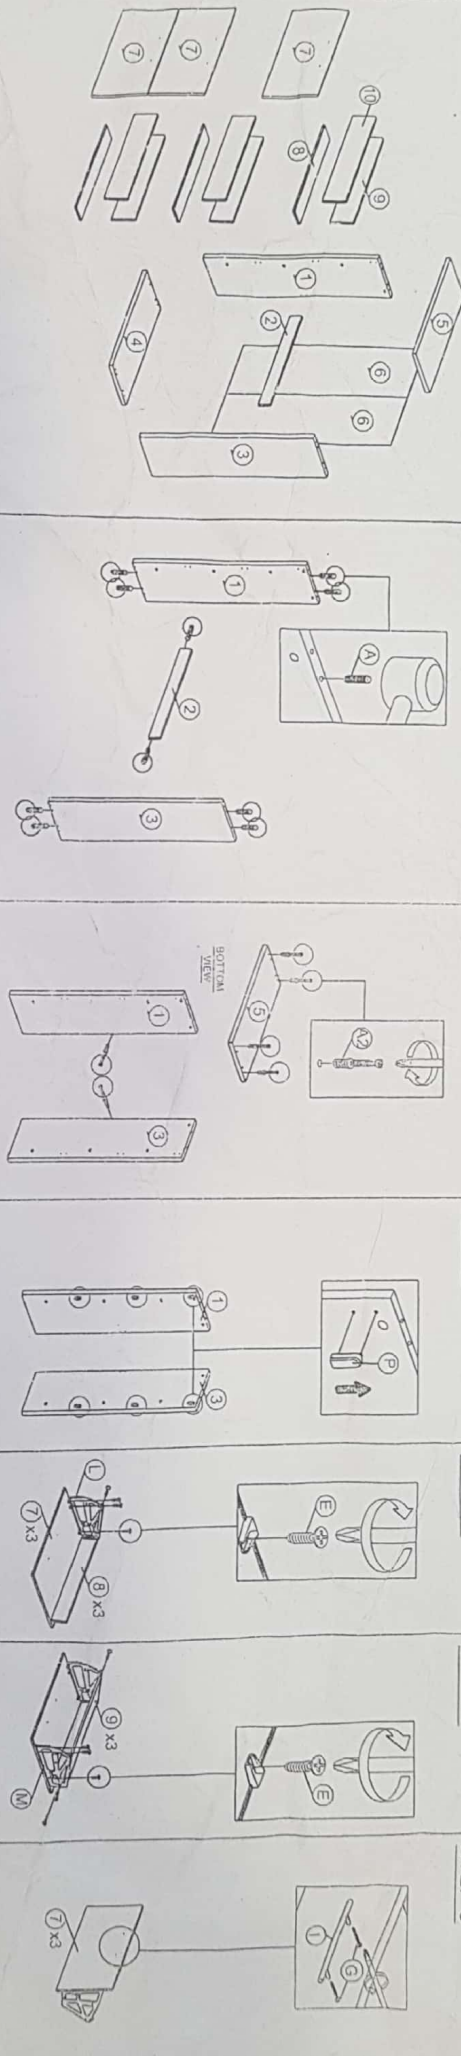

STEP 7

STEP 8

STEP 9

STEP 10

STEP 11

STEP 12

COMPLETED

